



# Toshiba Satellite A75-S226 Wi-Fi Card Replacement

Written By: Garrett Gudgel






## TOOLS:

- [Phillips #1 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-




## Step 1 — Wi-Fi/Memory Cover

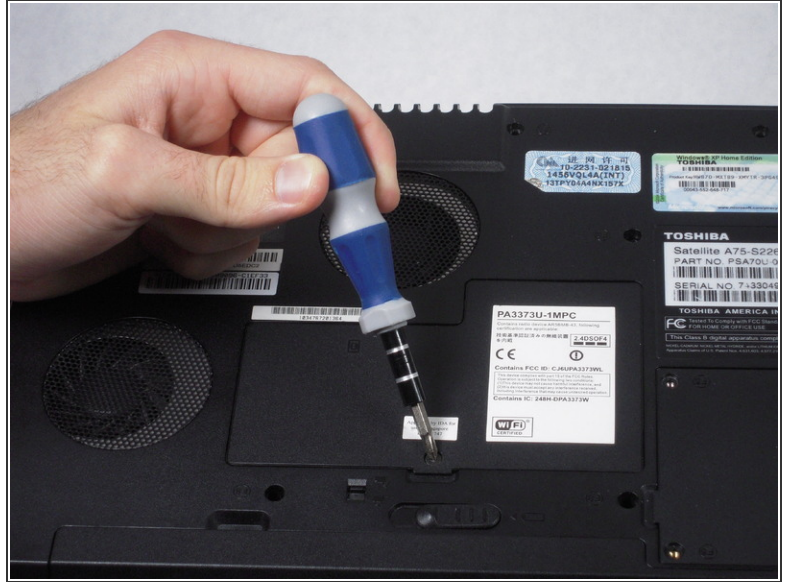

- Remove the 5.75 mm screw from the cover panel.

**i** Turn the laptop over with the screen facing down.


## Step 2

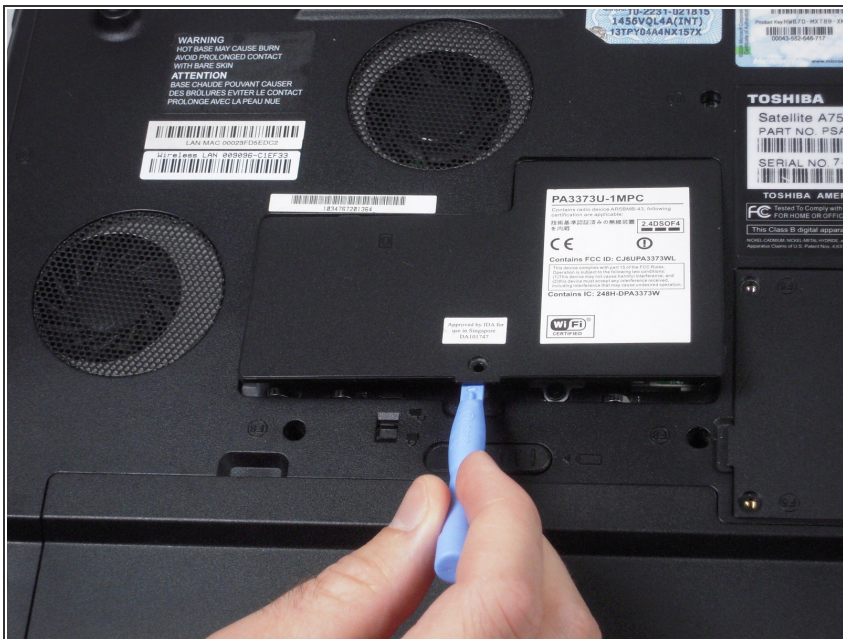

- Lift up the cover panel using a plastic opening tool.



## Step 3 — Wi-Fi Card

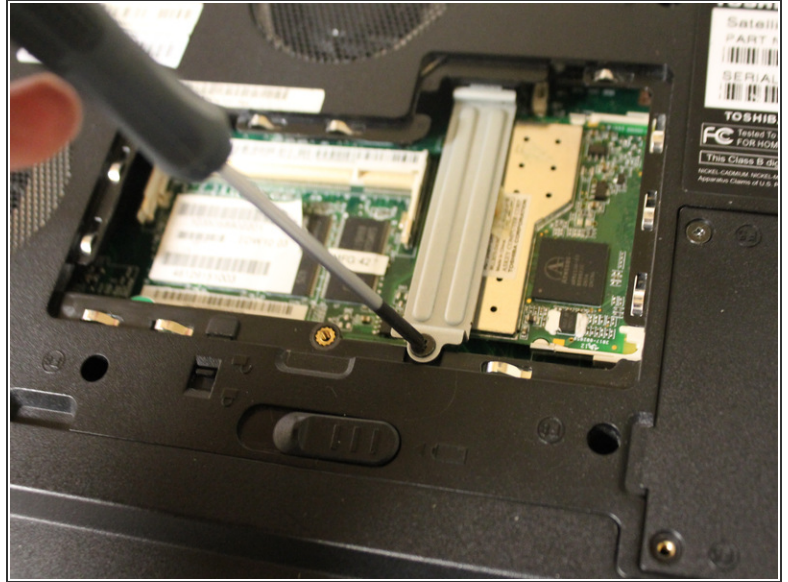

- Remove the 5.64 mm screw from the bottom of the crossing bar.
- Remove the crossing bar.

## Step 4



- Use a plastic opening tool to disconnect the black and white antenna cable's connectors from the Wi-Fi card.
- ⓘ Note that the black wire is connected to the port that is labeled main.



## Step 5



- Use fingers to push the clips away from memory card.

## Step 6



- Use Fingers to remove the Wi-Fi card.

To reassemble your device, follow these instructions in reverse order.

